


To insure you received the correct parts, you need to provide the model number of the unit and the serial number, along with the part number as shown below.


RP-40 & RP-60 Series Rocking Piston Compressor and Vacuum Pump

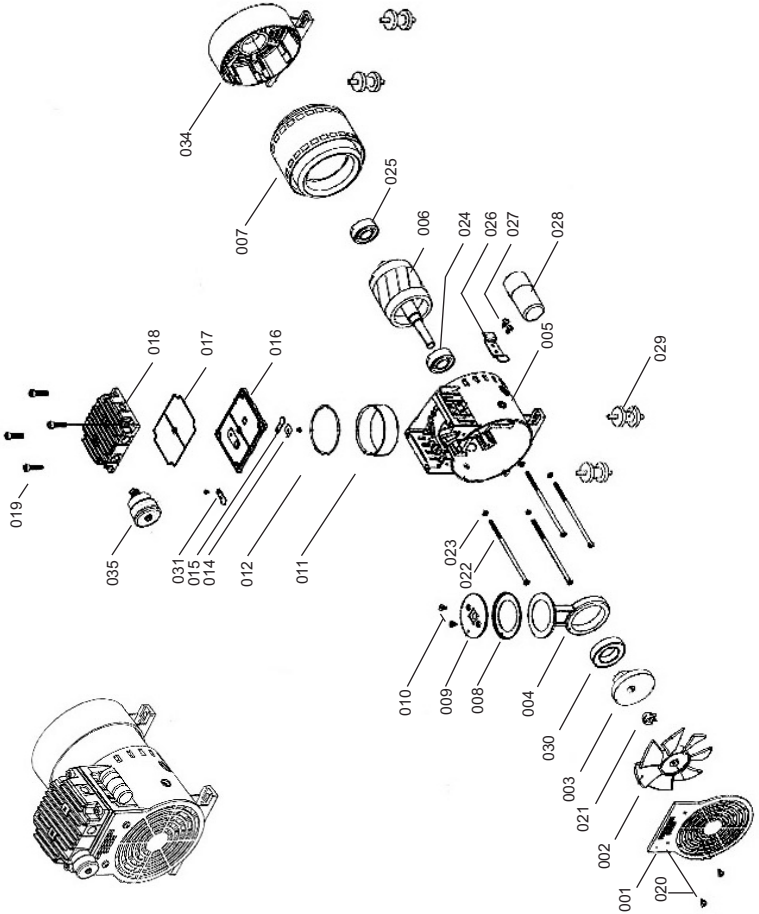

- 001 Cooling Fan Cover
- 002 Cooling Fan
- 003 Eccentric
- 004 Piston Rod
- 005 Housing
- 006 Rotor
- 007 Stator
- 008 Piston Cup
- 009 Round Plate
- 010 Screw M5-10
- 011 Cylinder
- 012 Cylinder O-Ring
- 013 Screw M4-5
- 014 Valve Fixed Strip
- 015 Down Valve Flapper
- 016 Valve Plate
- 017 Valve O-Ring
- 018 Head Cover
- 019 Screw
- 020 Screw
- 021 Fixing Clamp
- 022 Screw M5-15
- 023 Spring Washer
- 024 Bearing 6006zz
- 025 Bearing 6006zz
- 026 Bracket
- 027 Screw M5-8
- 028 Capacitor
- 029 Rubber Foot
- 030 Bearing 6203zz
- 031 Upper Valve Flipper
- 032 Connecting Tube
- 033 O-Ring
- 034 Back Cover
- 035 Silencer

To insure you received the correct parts, you need to provide the model number of the unit and the serial number, along with the part numbers as shown below.

RP-90, RP-120, RP-140, RP-180, RP-200 Series Rocking Piston Compressor and Vacuum Pump

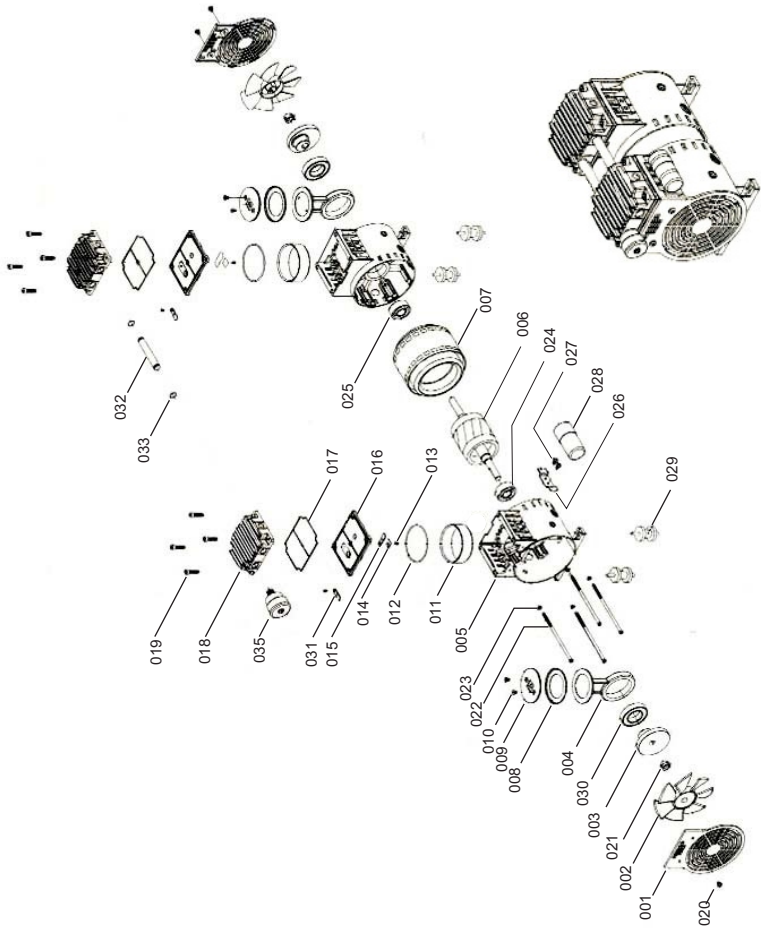

- 001 Cooling Fan Cover
- 002 Cooling Fan
- 003 Eccentric
- 004 Piston Rod
- 005 Housing
- 006 Rotor
- 007 Stator
- 008 Piston Cup
- 009 Round Plate
- 010 Screw M5-10
- 011 Cylinder
- 012 Cylinder O-Ring
- 013 Screw M4-5
- 014 Valve Fixed Strip
- 015 Downward Valve Flapper
- 016 Valve Plate
- 017 Valve O-Ring
- 018 Head Cover
- 019 Screw
- 020 Screw
- 021 Fixing Clamp
- 022 Screw M5-15
- 023 Spring Washer
- 024 Bearing 6006ZZ
- 025 Bearing 6006ZZ
- 026 Bracket
- 027 Screw M5-8
- 028 Capacitor
- 029 Rubber Foot
- 030 Bearing 6203ZZ
- 031 Upper Valve Flipper
- 032 Connecting Tube
- 033 O-Ring
- 034 Back Cover
- 035 Silencer